


Standard R panels require fasteners at the high corrugation or overlap which leave the short head of the fastener protruding. These fastener heads not only give the building an agricultural look but may also be harmful to humans or livestock that may brush or rub against the heads.

Reverse or Semi-Concealed wall panels allow fasteners in the low part of the corrugation which makes them less visible when looking down the side of the building (shown above).

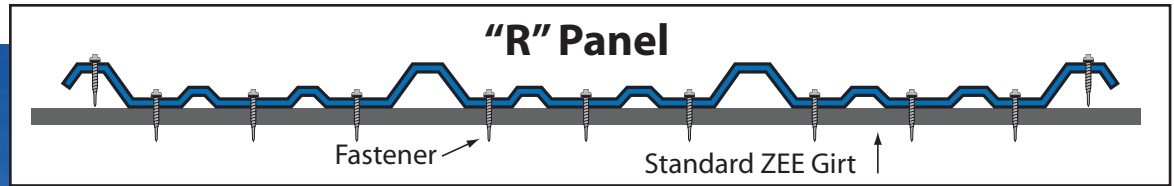



Standard R panels require fasteners at the high corrugation or overlap which leave the short head of the fastener protruding. These fastener heads not only give the building an agricultural look but may also be harmful to humans or livestock that may brush or rub against the heads.



Reverse or Semi-Concealed wall panels allow fasteners in the low part of the corrugation which makes them less visible when looking down the side of the building (shown above).

